

LIMITED WARRANTY

Bass Inferno warrants any products purchased in the U.S.A. from an authorized Bass Inferno dealer. All products are warranted to be free from defects in material and workmanship under normal use and service for a period of one (1) year. This warranty applies to the original purchase only.

Bass Inferno will either repair or replace (as its option) any unit that has been found to be defective and under warranty provided the defect occurs within the one (1) year warranty period.

This limited warranty does not extend to units have been subjected to misuse, abuse, neglect, or accident. In Bass Inferno's judgment, products that show evidence of having been altered, modified, or serviced without Bass Inferno's authorization, will be ineligible under this warranty.


To obtain warranty service please contact your retailer or visit our website at www.bassinferno.com for more details.



AMPLIFIERS

Bi2200Tx • Bi4200Fx

Bi1400Mx • Bi2400Mx • Bi3000Mx

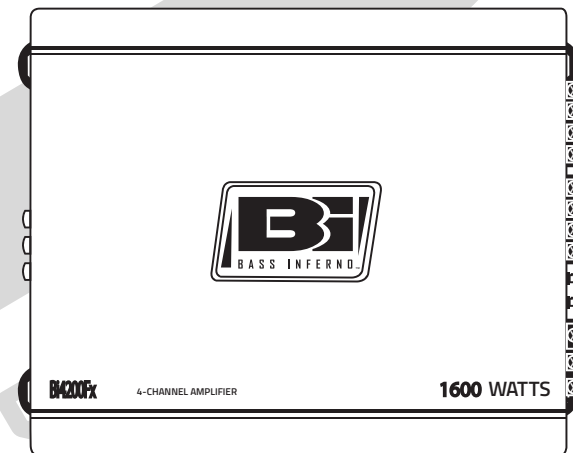

Instruction Manual

• Installation Instructions / Owners Manual •

Due to continuous improvement of the product the Specifications are subject to change without notice.



DB Research L.L.P.
302 Hanmore Industrial Parkway // Harlingen, TX 78550
ph: 877.787.0101 // fx: 956.421.4513 // www.bassinferno.com

INTRODUCTION

Congratulations on your purchase of a Bass Inferno state-of-the-art power amplifier. Your selection of a Bass Inferno car audio product indicates a true appreciation of fine musical reproduction. Whether adding to an existing system or including your Bass Inferno amplifier in a new system, you are certain to notice immediate performance benefits.

KEEP YOUR SALES RECEIPT

Take this time to attach your sales receipt to the manual and put in a safe place. In case of any unforeseen reason this product may need warranty service, your receipt will be necessary to establish purchase date.

RECOMMENDATION

A power amplifier's performance is only as good as its installation. Proper installation will maximize the system's overall performance. It is recommended that you have our product installed by an authorized Bass Inferno retailer. However, if you decide to install it yourself, please carefully read through this manual and take your time to do a quality installation.

Due to continuing product improvements and possible manual revisions, we recommend checking our website for latest product information at www.bassinferno.com

IMPORTANT! Before making any connections, disconnect the car's battery until the installation is completed to avoid possible damage to the electrical system.

WARNING!

Exposure to high power sound system can cause hearing loss or damage. Listening to your system at loud levels while driving will impair your ability to hear traffic sounds and emergency vehicles. Use common sense when listening to your system.

Serial # _____ Model # _____

SAFETY PRECAUTIONS

Fuse amplifiers power wire at the battery

Be sure to fuse the power wire within 12" of the car's battery. This will protect the car's battery in case of a short circuit between the power amplifier and battery. **THIS IS A MUST**, the amplifier's built-in fuse will only protect the power amplifier not the car's battery!

Use high grade wire connectors

To ensure maximum power transfer and secure safe connections, it is recommended to use high grade barrier spades (for connection at amplifier) and terminal rings (for connection at battery).

Do not run any wires underneath vehicle

Exposed wires have a chance of being cut or damaged. It is best to run all wires through the vehicle under the carpet and/or side panels. This lends to a cleaner installation and less risk of damage.

Use caution when mounting amplifier

Remember there are many electrical wires, gas lines, vacuum lines, brake lines as well as a gas tank in the automobile. Make sure you know where they are when mounting the amplifier to avoid puncturing lines, shorting wires or drilling holes in the gas tank.

Run signal wires away from electrical wires

To avoid possibility of induced noise from the car's electrical system (i.e. popping noises or engine noise), run wires away from the car's electrical wiring.

Make all ground wires as short as possible and at the same point

In order to reduce the chance of ground loops (i.e. engine noise), make the grounding wire as short as possible to reduce the wire's resistance. Also, when using multiple components, make sure all units are grounded at the same point.

Avoid sharp edges when running the wires

To avoid the possibility of power, signal or speaker shorts, be careful not to allow the amplifiers wires to come in contact with sharp edges. Use a grommet to protect the wire when running through the fire wall.

FEATURES AND BENEFITS

DC Offset Protection

This circuit protects the output of the amplifier against DC voltage. If for some reason DC voltage is detected at the output stage, the amplifier will shut down protecting the speakers from direct current.

Short Circuit Protection

The circuit protects the amplifier from damage due to a short found in the speakers or wiring. If one of the speakers or its wiring comes in contact with ground, the amplifier will shut down. To resume normal operation, correct the problem and turn the head unit off, then back on. The amplifier will reset and play again.

Thermal Protection

To protect the amplifier circuitry against damage caused by prolonged exposure to high temperatures, a thermal protection circuit is activated if the amplifier reaches excessively high operating temperature. Once the thermal circuit is activated, the amplifier will shut down to cool off. The amplifier will automatically turn back on once it cools down to a safe operating temperature.

Power Indicator

The diagnostic L.E.D. illuminates when the amplifier is on and receiving power.

Built-in Crossover

The Bass Inferno amplifiers feature a state of the art variable crossover. The Bi1400Mx, Bi2400Mx and Bi3000Mx use a 12db per octave slope Low Pass Crossover to filter all unwanted high frequencies. The Bi2200Tx and Bi4200Fx include both a Highpass and Lowpass filter.

Power and Speaker Distribution Blocks

Heavy gauge bare wire distribution blocks are provided for maximum power and signal transfer with minimal resistance.

Bass Boost

For added low frequency performance the Mono amplifiers are equipped with a variable *0~12dB bass boost @ 45Hz.

Line out (All Models)

Full range line outputs have been provided for convenient connection to additional amplifiers in the system.

Power Fusing

This protects the amplifier against short circuits and excessive current.

Remote Turn-on

Automatically turns amplifier on when connected to the head unit's remote output. The amplifier will turn on and off with the head unit to save current consumption. This control also operates the reset circuit for the amplifier's protection. It must be connected with the head unit in order to reset protection circuits.

Adjustable Input Sensitivity

Allows you to fine-tune the level matching between your source and the power amplifier.


Low Impedance Stability

Bi2200Tx -2 Ohm Stereo, 4 Ohm Bridged
Bi4200Fx -2 Ohm Stereo, 4 Ohm Bridged
Bi1400Mx -2 Ohm Mono
Bi2400Mx -1 Ohm Mono
Bi3000Mx-1 Ohm Mono


MOUNTING LOCATION

Before you start the installation, it will be necessary to find a mounting location for the amplifier. Find a location in which the amplifier will receive adequate ventilation in order to dissipate the heat it develops during operation. Two popular mounting locations are in the trunk or under the seat.

Select the location in which you wish to mount the amplifier. Use caution when mounting amplifier, there are many wires, gas lines, vacuum lines, brake lines as well as a gas tank in the automobile. Make sure you know where they are when mounting the amplifier to avoid puncturing lines, shorting wires or drilling holes in the gas tank. Once you are ready, use a pencil to mark the mounting holes in the bottom panel. After you have marked the locations of the holes move amplifier out of the way and drill small starter holes to make the tapping screws easier to install. Use provided screws to tighten down the amplifier.

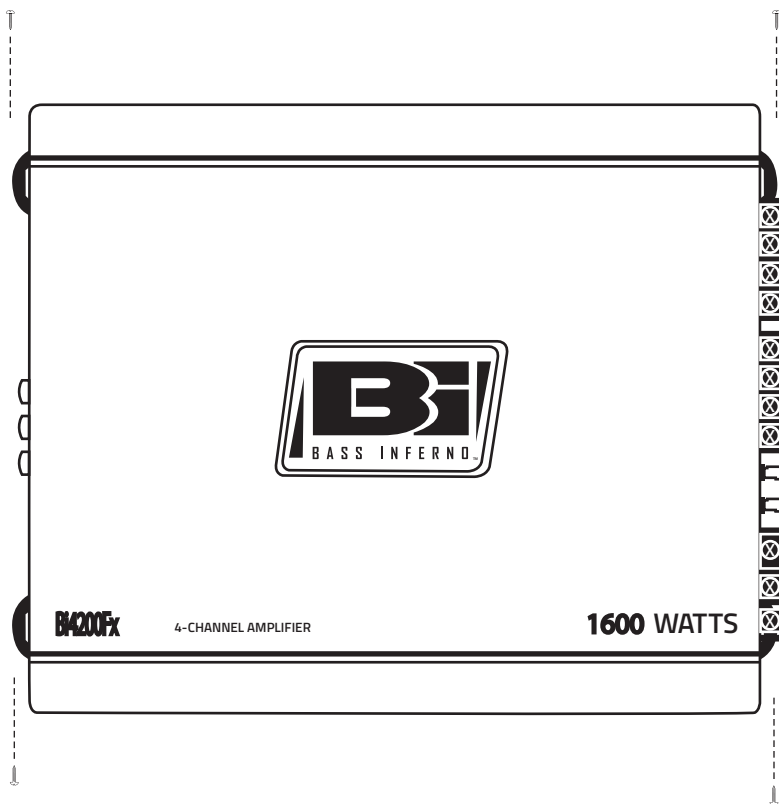

POWER CONNECTIONS

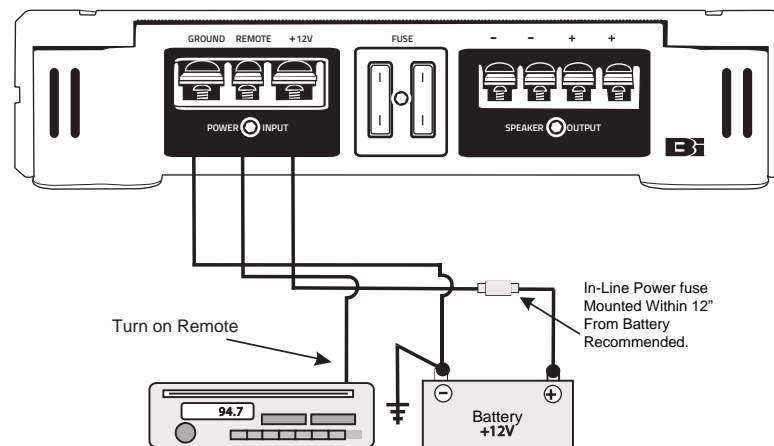

IMPORTANT! Before making any connections, disconnect the car's battery until the installation is completed to avoid possible damage to the electrical system.

Connect the amplifier to the car's battery

At times, the amplifier will need to draw large levels of current that cannot be provided by any circuit in the car's fuse box. We recommended using a 4 to 8 gauge power wire for your connections depending on the amplifier and length of the wire. Strip one end of the wire to connect to the terminal on the amplifier marked "batt+". Loosen screw terminal and connect bare wire and tighten. Use caution to make sure no stray wire strands come in contact with surrounding terminals causing short circuits. Run the wire directly to the positive terminal of the car's battery. Make sure to use an in-line fuse within 12" of the car's battery to protect the electrical system and amplifier against short circuits and/or power surges.

Connect the ground terminal of the amplifier to the car's chassis

For the ground connection, use a 4 to 8 gauge wire (black) to connect to the terminal marked "ground" and then connect it to the car's chassis. Try to keep the length of the cable as short as possible, preferably less than 6". Also make sure that the point on the car where the connection is to be made is free of paint and dirt.

Connect the remote terminal of the amplifier to a switchable +12V source



This connection allows the amplifier to be turned on and off with the power control of the radio. If the radio has a REMOTE output terminal, connect it to the amplifier's terminal marked "remote" (using a 16 gauge wire or heavier). Now when the radio is turned on, the amplifier will automatically turn on. This connection can also be made to the radio's Power Antenna wire.

SIGNAL CONNECTIONS

Connect the RCA output of the head unit (AM/FM cassette player, CD, or DAT) to the RCA input terminals of the amplifier.

To make these connections, we recommend high quality RCA cables, which are available at your local car audio retailer. Run signal wires away from electrical wires to avoid possibility of induced noise from the car's electrical system (i.e. popping noises or engine noise).

SIGNAL CONNECTION:

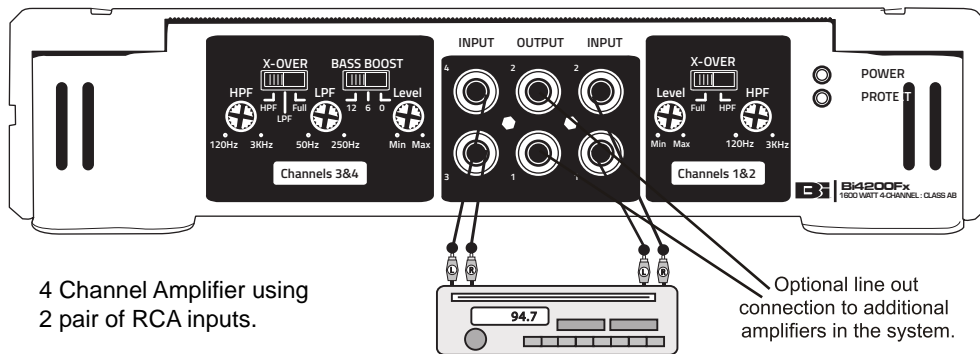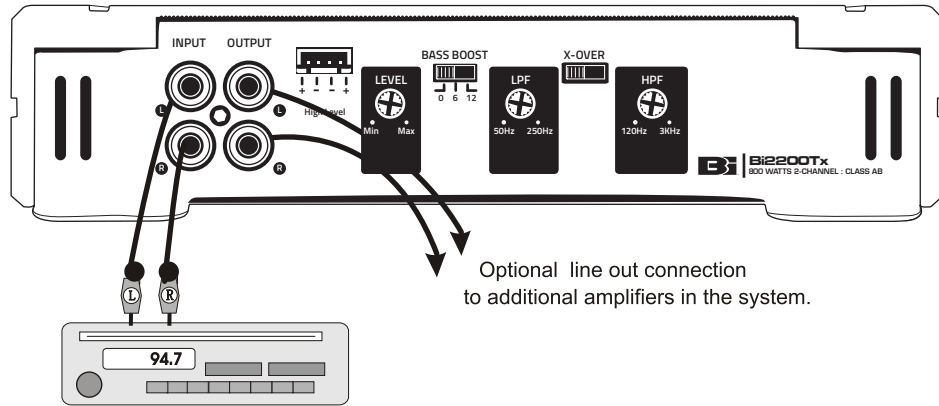

4 Channel Amplifier using 2 pair of RCA inputs.

Optional line out connection to additional amplifiers in the system.


SPEAKER CONNECTIONS

(Bi1400Mx , Bi2400Mx, Bi3000Mx)


IMPORTANT! The following speaker connection are for the amplifier in normal mono configuration.

Make the speaker connections using speaker wire that is at least 16 gauge or heavier. As with any audio component, proper phasing of the amplifier and speakers is essential for strong bass response. When connecting, make sure that positive (+) from the amplifier is connected to the positive (+) of the speaker, and the same for negative (-).

Please note that although the Bi1400Mx, Bi2400Mx, Bi3000Mx are mono amplifiers, we have provided two sets of speaker terminals on the amplifier. These terminals are connected in paralleled internally (connected together). The second set of speaker terminals are intended for ease of connection when running multiple woofers.

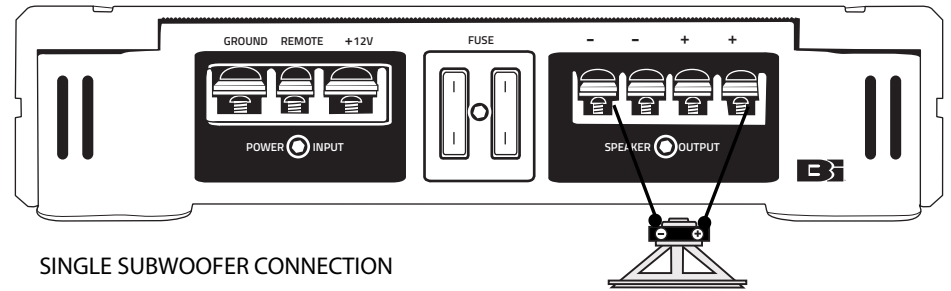

SINGLE SUBWOOFER CONNECTION

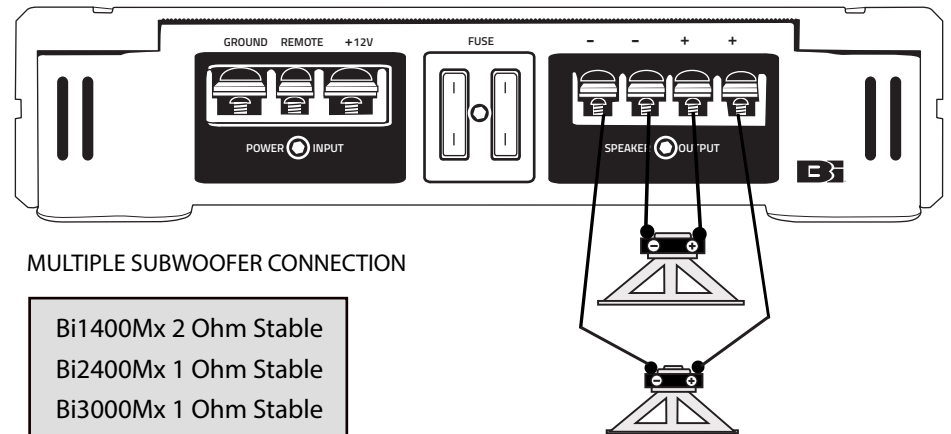

MULTIPLE SUBWOOFER CONNECTION

Bi1400Mx 2 Ohm Stable
Bi2400Mx 1 Ohm Stable
Bi3000Mx 1 Ohm Stable

****CAUTION!** Amplifier must see proper load or higher. Any lower than recommended load will cause the amplifier to overheat and possibly cause permanent damage to the amplifier!


SPEAKER CONNECTIONS

(Bi2200Tx, Bi4200Fx)

Make the speaker connections using speaker wire that is at least 16 gauge or heavier.

As with any audio component, proper phasing of the amplifier and speakers is essential for strong bass response. When connecting, make sure that positive (+) from the amplifier is connected to the positive (+) of the speaker, and the same for negative (-).

2 CHANNEL SPEAKER CONNECTION

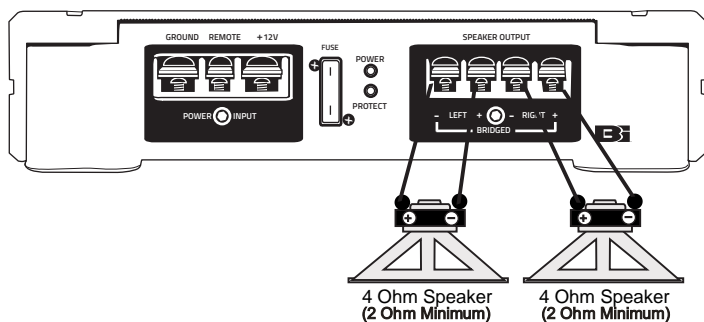


SPEAKER CONNECTIONS

(Bridged)


The Bass Inferno amplifiers are capable of being bridged in a mono configuration. This feature allows you the flexibility of using the amplifier to drive a ** subwoofer or a center channel. In this configuration the amplifier sums the right and left channel to deliver one channel (mono) output.

Please note: in order for the amplifier to sum right and left signal information, both right and left RCA connections must be made.


2 CHANNEL SPEAKER CONNECTION

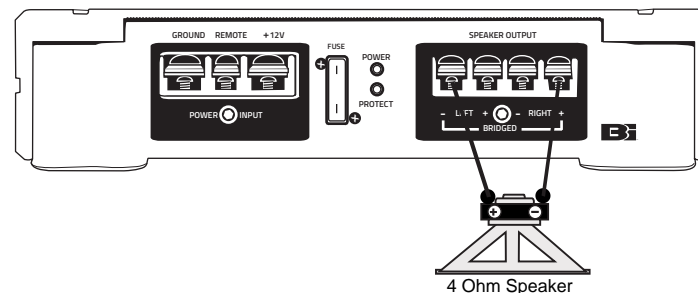

4 CHANNEL BRIDGED CONNECTIONS

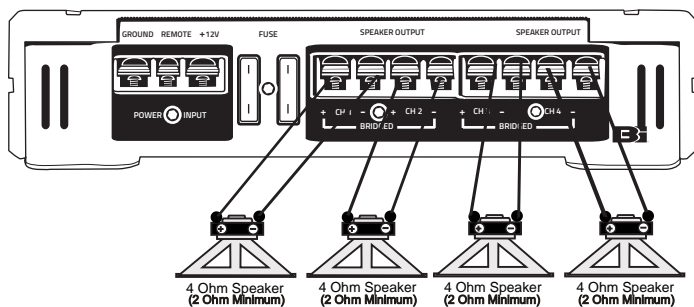

4 CHANNEL BRIDGED CONNECTIONS

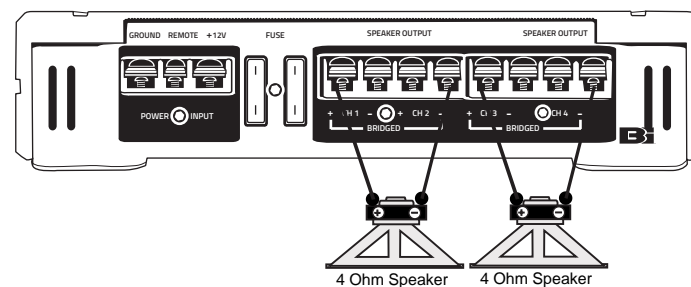


****CAUTION!** When in the stereo mode, the Bi2200Tx and Bi4200Fx must see a 2 Ohm load or higher. Any lower than 2 Ohms will cause the amplifier to over heat and possibly cause permanent damage to the amplifier!

****CAUTION!** In the bridged mode, the amplifier must see a 4 Ohm load or higher. Any lower than 4 Ohms will cause the amplifier to overheat and possibly cause permanent damage to the amplifier!


REMOTE BASS CONTROL MODULE

Before connecting the remote, it will be necessary to find a mounting location that will be easy to access for adjustment. Once you select your mounting location, you will need to run the control wire from the remote to the amplifier. To avoid possibility of induced noise from the car's electrical system (i.e. popping noises or engine noise), run the cable from the remote to the amplifier away from the car's electrical wiring.

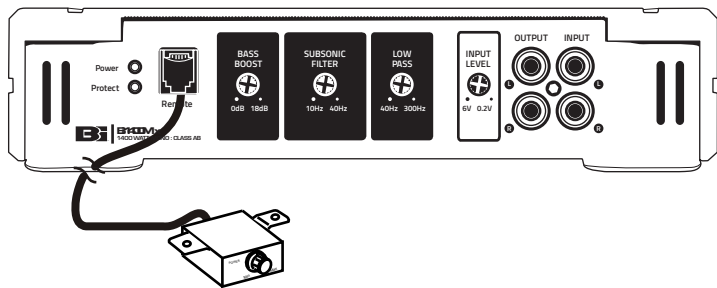


ADJUSTMENTS AND SETTINGS

The "Bass Inferno" amplifiers are equipped with built-in variable crossover networks allowing you to select the crossover mode (i.e. Low-Pass/Full/High-Pass or On/Off) and the desired crossover point. For example if you wish to drive a pair of subwoofers, you can select the "Low Pass" setting on the amplifier to filter out high frequencies. This will send only low frequencies to your subwoofers (see example settings below). The crossover point should be determined by the speakers operating range. Please refer to speaker manufactures recommended crossover point.

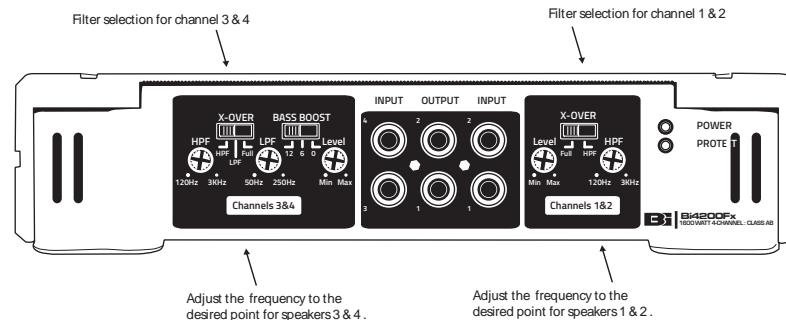

FINE TUNE THE SYSTEM

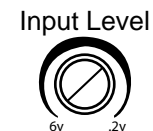

Fine tune the amplifier's input sensitivity

The gain sensitivity control for the "Bass Inferno" amplifier is located on the side panel. This gain control has been included to allow adjustment to properly match the output of the radio. This is one of the most misunderstood adjustments. By rotating the control in the clockwise direction, the amplifier's input will become more sensitive and the music will play louder. This is not a volume control and you will not get more power out of the amplifier in the maximum position! It may seem to deliver more output, but actually the system is only playing louder faster as you turn the volume control on the radio. Ideally, to properly level match the system the goal is to achieve maximum output from the amplifier without distortion at about $\frac{3}{4}$ of the volume control.

To determine if the amplifier's gain is set properly, turn the system on and slowly increase the volume control. You should be able to use about $\frac{3}{4}$ volume before the system gets loud but not distorting. It is very important when making these adjustments that you do not over drive the speakers (at point of distortion) this will cause permanent damage to the speakers. If you are unable to achieve $\frac{3}{4}$ volume before distortion you will need to adjust gain control (in this case you would reduce the gain). The gain controls should be adjusted very slowly. It may help to have another person to assist you by adjusting the gain controls while you listen for distortion.

TROUBLE SHOOTING THE SYSTEM

We have put together this trouble-shooting guide if you experience problems after installing the amplifier. Please keep in mind that the majority of problems incurred are caused by improper installation and not the equipment itself. In addition, there are many components in the system that could cause various signal problems such as inducted electrical noise and engine noise.

Before you can properly address the problem, you must first find the component that is causing the problem. This will take patience and a process of elimination.

LOOK FOR.....	SOLUTION
No Output	
Blown fuse	Replace
Bad RCA Cable(s)	Replace
+12V at power terminal	Check connection
+12V at remote terminal	Check connection
Grounding point clean and tight	Check for ground w/meter
Head Unit's fader not in center position	Set to center position
Master & Slave settings	Confirm correct setting
Low Output	
Check level adjustments	Re-adjust
Bad RCA cable(s)	Replace
Improper level matching	Re-adjust
Master & Slave settings	Confirm correct setting
Engine Noise	
Grounding points are clean and tight	Check for ground w/meter
Ground all components at same point	Ground at same point
Try different grounding point	Change for better ground
Bad RCA cable(s)	Replace
Use High Quality shielded RCA cables	Rejects inducted noise
Low Vehicle charging system and/or battery	Fix and/or replace
Red Protection L.E.D. illuminated	
Speaker short	Check speakers connection for short circuit
Speaker grounding out	Make sure speaker wires Do not touch chassis ground
Impedance too low	Check speaker impedance
Overheating	Check mounting location for Adequate air circulation speaker impedance too low

	Bi1400Mx	Bi2400Mx	Bi3000Mx
Output Power :			
1 ohm	N/A	1 x 2400W	1 x 3000W
2 ohm	1 x 1400W	1 x 1200W	1 x 1500W
Rated @ 1 ohm	1 x 300W	1 x 600W	1 x 750W
Frequency Resp.	10Hz - 300Hz	10Hz - 300Hz	10Hz - 300Hz
S/N Ratio (A-weight)	>90dB	>90dB	>90dB
THD with 80k filter	<.05%	<.05%	<.05%
Low Input Level	285mV - 6V	285mV - 6V	285mV - 6V
Crossover Freq.	40Hz - 300Hz	40Hz - 300Hz	40Hz - 300Hz
Crossover Slope	12dB	12dB	12dB
Bass EQ	18dB @ 45Hz	18dB @ 45Hz	18dB @ 45Hz
Subsonic Filter	10Hz - 40Hz	20Hz - 50Hz	20Hz - 50Hz
Bass Remote Capability	Yes (Included)	Yes (Included)	Yes (Included)
Input Voltage	11.2V - 14.4V	11.2V - 14.4V	11.2V - 14.4V

	Bi4200Fx	Bi2200Tx
Output Power :		
4 ohm	4 x 200W	2 x 200W
2 ohm	4 x 400W	2 x 400W
Bridged @ 4 ohm	2 x 800W	1 x 800W
Rated @ 4 ohm	4 x 45W	4 x 45W
Frequency Resp.	10Hz - 25KHz	10Hz - 25KHz
S/N Ratio (A-weight)	>90dB	>90dB
THD with 80k filter	<.05%	<.05%
Low Input Level	285mV - 6V	285mV - 6V
Crossover Freq. (Low)	50Hz - 250Hz	50Hz - 250Hz
Crossover Freq. (High)	120Hz - 3KHz	120Hz - 3KHz
Crossover Slope	12dB	12dB
Bass EQ	0dB-6dB-12dB @45Hz	0dB-6dB-12dB @45Hz
Input Voltage	11.2V - 14.4V	11.2V - 14.4V

Due to continuous improvement of the product the Specifications are subject to change without notice.